External USB 6X 4X 6X CD Rewriter

QUICK INSTALLATION GUIDE — Please read before using this equipment.

SYSTEM REQUIREMENTS

Make sure your computer has all of the following before connecting the CD rewriter to it.

- IBM, PC with Pentium 166 MHz processor or compatible

  with

- Windows 2000, Windows 98 SE or later, or Windows ME
- one available USB port
- at least 32 MB RAM
- at least 50 MB free hard disk space (for installing supplied software)
- at least 10 MB free hard disk space for each minute of music you record (750 MB total)

Note: You cannot use the CD rewriter with Microsoft Windows 3.1 or Windows 95 or with a Macintosh computer.

SUPPLIED ACCESSORIES

Make sure you have all of the following accessories before disposing of the packing material.

- AC adapter
- AC power cord
- MUSICMATCH and Nero software CD
- Nero operating guide
- Blank CD-R disk
- Quick Installation Guide
- Stand for vertical placement
- USB device driver floppy disk
- USB cable

❒ *Installing Hardware*

1. Turn on your computer and start the Windows operating system (Windows 98 SE or later, Windows 2000, or Windows ME).
2. Connect the supplied AC power cord's female plug to the supplied AC adapter's power cord socket.
3. Connect the supplied AC adapter's barrel plug to the CD rewriter's **DC 12V** jack.
4. Connect the AC adapter's plug to a standard AC outlet.
5. Set **I/O** to **I** (on). The power indicator lights.
6. With the icon side up, connect the supplied USB cable's square plug to the CD rewriter's USB socket. Then connect the USB cable's flat plug to the computer's USB socket.

   Note: The USB plug fits into the USB socket only one way. If you cannot insert it into the USB socket, turn it over and try again. Do not force it into the socket.

RadioShack®
www.radioshack.com™

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

The computer system automatically detects the CD rewriter and prompts you to install the supplied USB device driver.

For more information about installing the USB device driver, see “Installing Software.”

Rear View

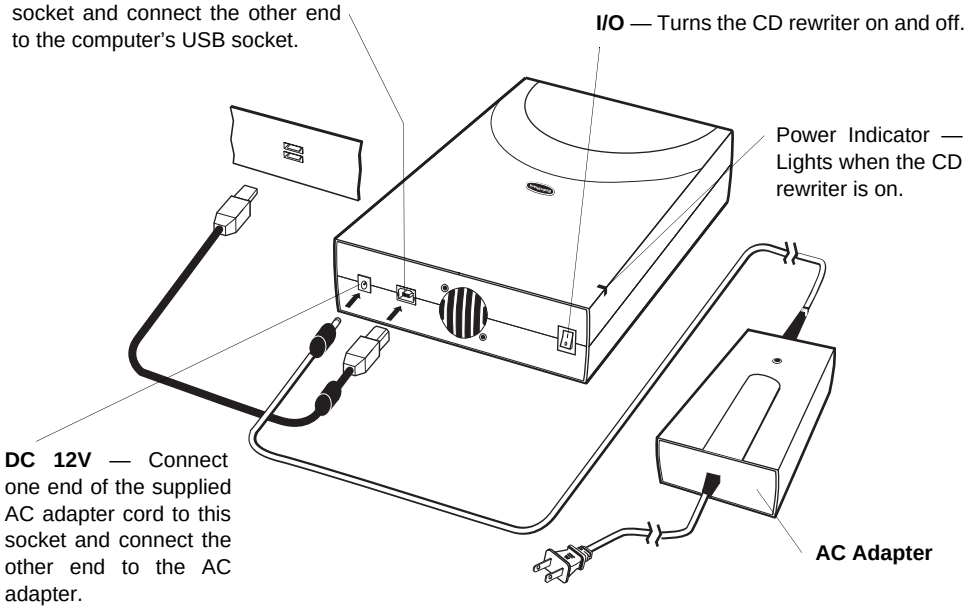

❒ *Installing Software*

Your CD rewriter includes the following software disks:

- USB Device Driver floppy disk
- MUSICMATCH and Nero recording software CD

After you finish the steps under “Installing Hardware” on Page 1, your computer automatically detects the CD rewriter and prompts you to install the USB device driver.

Installing the USB Device Driver

Select your operating system then follow the steps for that operating system.

Windows 98

When you finish installing the hardware, the **Add New Hardware Wizard** screen appears.

1. Click **Next**. **What do you want Windows to do?** appears.

2. If necessary, select the default selection **Search for the best driver for your device. (Recommended).** Then click **Next**. A dialog box appears.

3. Click **Specify a location**, insert the supplied USB Device Driver floppy disk into your floppy disk drive, click **Browse**, select and double click **A:** to open the file,

select **win98/2000** under **3 1/2 floppy (A):**, then click **OK**. A dialog box appears.

4. Click **Next**. The driver file is copied onto your computer's hard disk. *Windows has finished installing the software that your new hardware device requires* appears.

5. Click **Finish** to finish installing the driver. A dialog box appears prompting you to restart your computer.

6. Click **Yes**. The CD rewriter is ready to use.

For Windows 2000

When you finish installing the hardware, the **Found New Hardware Wizard** screen appears.

1. If necessary, select the default selection **Search for a suitable driver for my device (recommended).** Then click **Next**. A dialog box appears.

2. Click **Specify a location** then click **Next.** A dialog box appears.

3. Insert the supplied USB Device Driver floppy disk into your floppy disk drive, click **Browse**, select and double click **A:** to open the file, select **win98/2000** under **3 1/2 floppy (A):**, then click **OK**. A dialog box appears.

4. Click **Yes**. The driver file is copied onto your computer's hard disk.

5. Click **Finish** to finish installing the driver. The CD rewriter is ready to use.

For Windows ME

When you finish installing the hardware, the following screen appears.

1. Select **Specify the location of the driver (Advanced).** Then click **Next**. A dialog box appears.

2. Click **Search for the best driver for your device (Recommended)**, click **Specify a location**, insert the supplied USB Device Driver floppy disk into your floppy disk drive, click **Browse**, select **winME** under **3 1/2 floppy (A):**, then click **OK**. A dialog box appears.

3. Click **Next**. The driver file is copied onto your computer's hard disk.

4. Click **Finish** to finish installing the driver. The CD rewriter is ready to use.

Installing the CD Writing Software

Insert the supplied MUSICMATCH and Nero recording software CD into your CD-ROM drive or your CD rewriter. A dialog box appears with installation instructions. Follow the instructions to install the software.

Notes:

- For detailed installation instructions, refer to the Operating Guide supplied with the MUSICMATCH and Nero recording software CD."
- Some programs might require that you reboot your system after installing them. Follow the program's prompt to reboot your computer if necessary.

OPTIMIZING YOUR SYSTEM

A stable recording environment is a must for proper CD recording. Recording must be performed free of any hardware or software interruption.

For best results, use a hard disk drive for recording that has *only* the operating system (Windows 98 SE or later, Windows 2000, or Windows ME) and the CD writing software installed on it. If you do not have an extra hard disk drive, follow these steps to optimize your system.

1. Close all resident programs including any anti-virus programs, screen savers, System Agent, Power Management, etc.

2. Turn off Auto Insert notification.

3. Close any program running in a maximized or minimized window.

4. Defragment your hard disk drive. This is particularly important when you write files to a CD from your hard disk drive. Defragmenting your hard disk drive reallocates all the files so these relevant files are placed in nearby clusters. This saves time and trouble when the MUSICMATCH and Nero recording software is searching for the files you want to record on CD.

Caution: Do not connect too many devices internally to your computer system. Heavy loads carried by your computer system's power supply might result in unstable power delivery to each connected device, causing your computer system to become unstable.

RadioShack Corporation
Fort Worth, Texas 76102

25-3052
06A01
Printed in Malaysia